

| | | |
|------------|--|-----|
| PS1TS2 | CESCO 1 Gang 2 Way Polished Chrome Toggle Switch | 7 |
| PS1TV | CESCO 1 Gang Polished Chrome TV Socket | 6 |
| PS20DPSN | CESCO 20 Amp (20A) Polished Chrome Double Pole Switch + Neon | 16 |
| PS213SS | CESCO 2 Gang 13 Amp (13A) Polished Chrome Switched Socket | 13 |
| PS2400D/2 | CESCO 2 Gang 2 Way 400 watt Polished Chrome Dimmer | 45 |
| PS245SN | CESCO 2 Gang 45 Amp (45A) Polished Chrome Cooker Switch c/w Neon | 67 |
| PS2LS2 | CESCO 2 Gang 2 Way Polished Chrome Switch | 46 |
| PS2TS2 | CESCO 2 Gang 2 Way Polished Chrome Toggle Switch | 12 |
| PS3LS2 | CESCO 3 Gang 2 Way Polished Chrome Switch | 16 |
| PS4LS2 | CESCO 4 Gang 2 Way Polished Chrome Switch | 28 |
| VABZ113SS | CESCO 1 Gang 13 Amp (13A) Flat Antique Bronze Switch Socket | 76 |
| VABZ13SSUN | CESCO 13 Amp (13A) Antique Bronze Switch Fused Spur c/w Neon | 120 |
| VABZ1400D/ | CESCO 1 Gang 2 Way 400W (400 Watts) Flat Antique Bronze Dimmer | 55 |
| VABZ145SN | CESCO 1 Gang 45 Amp Vantage Antique Bronze Cooker | 89 |
| VABZ1LS2 | CESCO 1 Gang 2 Way Vantage Antique Bronze Switch | 23 |
| VABZ1TS | CESCO 1 Gang Vantage Antique Bronze Telephone Socket | 83 |
| VABZ1TV | CESCO Vantage 1 Gang Antique Bronze TV Socket | 88 |
| VABZ2250D/ | CESCO 2 Gang 2Way 250W (250 Watts) Vantage Antique Bronze Dimmer | 76 |
| VABZ245SN | CESCO 2 Gang 45 Amp Vantage Antique Bronze Cooker | 79 |
| VABZ2LS2 | CESCO 2 Gang 2 Way Vantage Antique Bronze Switch | 18 |
| VABZ3LS2 | CESCO 3 Gang 2 Way Vantage Antique Bronze Switch | 48 |
| VPB113SS | CESCO 1 Gang 13A Polished Brass Switched Socket | 1 |
| VPB13SSUN | CESCO 13 Amp (13A) Polish Brass Switch Fused Spur c/w Neon | 24 |
| VPB1400D/2 | CESCO 1 Gang 2 Way 400W (400 Watts) Flat Polished Brass Dimmer | 11 |
| VPB145SN | CESCO 1 Gang 45 Amp (45A) Vantage Brass Cooker Switch | 10 |
| VPB1TS | CESCO 1 Gang Vantage Polish Brass Telephone Socket | 120 |
| VPB1TV | CESCO Vantage 1 Gang Polished Brass TV Socket | 18 |
| VPB213SS | CESCO 2 Gang 13 Amp (13A) Vantage Brass Switched Socket | 1 |
| VPB2250D/2 | CESCO 2 Gang 2Way 250W (250 Watts) Vantage Polished Brass Dimmer | 5 |
| VPB245SN | CESCO 2 Gang 45 Amp (45A) Vantage Brass Cooker Switch | 5 |
| W113SS | CESCO 1 Gang 13 Amp (13A) Stepped Edge Brass Switched Socket | 18 |
| W1250D/1 | CESCO 1 Gang 1 Way 250W (250 Watts) Stepped Edge Brass Dimmer | 6 |
| W1250D/2 | CESCO 1 Gang 2 Way 250W (250 Watts) Stepped Edge Brass Dimmer | 10 |
| W13SSUN | CESCO 13 Amp (13A) Stepped Brass Switched Fuse Spur c/w Neon | 52 |
| W1400D/2 | CESCO 1 Gang 2 Way 400W (400 Watts) Stepped Edge Brass Dimmer | 1 |
| W145S | CESCO 1 Gang 45 Amp (45A) Stepped Edge Brass Cooker Switch | 17 |
| W1TS | CESCO 1 Gang Stepped Edge Brass Telephone Socket | 182 |
| W1TS2 | CESCO 1 Gang 2 Way Stepped Edge Brass Toggle Switch | 0 |
| W1TV | CESCO 1 Gang Stepped Edge Brass TV Socket | 119 |
| W20DPSN | CESCO 20 Amp (20A) Stepped Brass Double Pole Switch c/w Neon | 53 |
| W2250D/2 | CESCO 2 Gang 2 Way 250W (250 Watts) Stepped Edge Brass Dimmer | 48 |
| W2400D/2 | CESCO 2 Gang 2 Way 400W (400 Watts) Stepped Edge Brass Dimmer | 4 |
| W245SN | CESCO 2 Gang 45 Amp (45A) Stepped Edge Brass Cooker Switch | 135 |
| W2GSS | CESCO 2 Gang 13 Amp Stepped Edge Brass Switched Socket | 11 |
| W2LS2 | CESCO 2 Gang 2 Way Stepped Edge Brass Switch | 10 |
| W2LS2BK | CESCO 2 Gang 2 Way Stepped Edge Brass Switch - Black Switch | 2 |
| W2TS2 | CESCO 2 Gang 2 Way Stepped Edge Brass Toggle Switch | 14 |
| W3LS2 | CESCO 3 Gang 2 Way Stepped Edge Brass Switch | 4 |
| W4LS2 | CESCO 4 Gang 2 Way Stepped Edge Brass Switch | 154 |
| W4TS2 | CESCO 4 Gang 2 Way Stepped Edge Brass Toggle Switch | 44 |
| WINTS | CESCO 1 Gang 2 Way Intermediate Stepped Edge Brass Switch | 2 |